

Maintenance details for LG936L

Version: 2016-11-24

Maintenance site	Maintain contents	Maintenance cycle (h)									Specification and code	Qty.	Replacement cycle	Remarks
		100	250	500	750	1000	1250	1500	1750	2000				
Engine	Engine oil	*	*	*	*	*	*	*	*	*	CD 15W/40	18L	First 100h, Cycle 250h	
	Oil filter element	*	*	*	*	*	*	*	*	*	411000054305	1		
Fuel system	Oil - water separator filter element			*		*		*		*	4110000189031	1	500h	
	Primary fuel filter element		*	*	*	*	*	*	*	*	7200002385	2	250h	
Air cleaner	Primary element of air cleaner			*		*		*		*	4110000991027	1	500h	
Cooling system	Coolant									*	—35#	about 31Kg	2000h or 1 year	
Transmission system	Hydraulic transmission oil	*		*		*		*		*	Hydraulic transmission oil 6#	44L	First 100h, Cycle 500h	
	Transmission respirator filter element					*				*	4110001544001	1	1000h	
	Transmission oil filter element	*		*		*		*		*	4110000507007	1	First 100h, Cycle 500h	
	Drive axle gear oil	*				*				*	GL-5 85W/90	(13+2.5*2) L (12+2*2) L	First 100h, Cycle 1000h	Front Axle Rear Axle
Hydraulic system	Hydraulic oil					*				*	L-HM46#	128L	First 1000h, Cycle 2000h	
	Pilot filter element					*				*	4120001954001	1	1000h	
	Oil return filter element					*				*	29100004061	1	1000h	
Braking System	Braking fluid			*		*		*		*	DOT3	2L	500h	Single Pneumatic Cylinder
A/C	Fresh air filter screen					*				*	29350010491	1	1000h	
	Return air filter screen					*				*	29350010501	1		

Note: 1.The codes of maintenance parts listed in this form are for reference only, and should not be considered as the basis for the purchase of accessories which should be subject to the drawings at L@M system.

2. The maintenance details apply to the following order numbers: E3623115A29, E3623115Q29, E3623115A36, E3623115AK6, E3623115AK9